

**Stanwell Technic Limited**  
**FOB**  
**Installation & Operating Instructions**

- 1 Mount the FOB vertically to the wall in a suitable location with two screws using the attached clip on bracket.
- 2 From the keg coupler (or pump if used), connect 3/8" OD tubing into the JG inlet port on the side of the FOB chamber. Use beverage grade tubing which is made of a hard material such as MDP, Nylon etc. Do not use soft tubing as this is not compatible with the John Guest connector.
- 3 Connect 3/8" OD tubing from the JG outlet port in the base of the FOB to the bar dispense tap, via a cooler. Use beverage grade tubing which is made of a hard material such as MDP, Nylon etc. Do not use soft tubing as this is not compatible with the John Guest connector.
- 4 Connect 3/16" OD tubing from the JG outlet port of the serve/vent valve on the top of the FOB to a suitable drain.
- 5 Connect the keg coupler and then open the serve/vent valve to 'VENT' this will allow product into the FOB chamber. Press, if the vent is the 'Push Button' type.
- 6 When the FOB chamber is full of liquid and empty of foam, close the serve/vent valve to the 'SERVE' position. The FOB is now primed. Release, if the vent is the 'Push Button' type.
- 7 Operate the serve & clean lever on the front of the chamber to release and allow the float to rise to the top of the chamber.
- 8 Set the serve/clean lever so that 'SERVE' is uppermost. Now ready to dispense.
- 9 When the keg is empty, the float in the chamber will drop and shut off the dispense line. To re-prime the FOB, connect a new keg and repeat 6 to 9.
- 10 When line cleaning, set the serve/clean lever so that 'CLEAN' is uppermost, this will allow cleaning solution to flow through the FOB freely.
- 11 After line cleaning, flush the system thoroughly with clean water, repeat 6 to 9.